



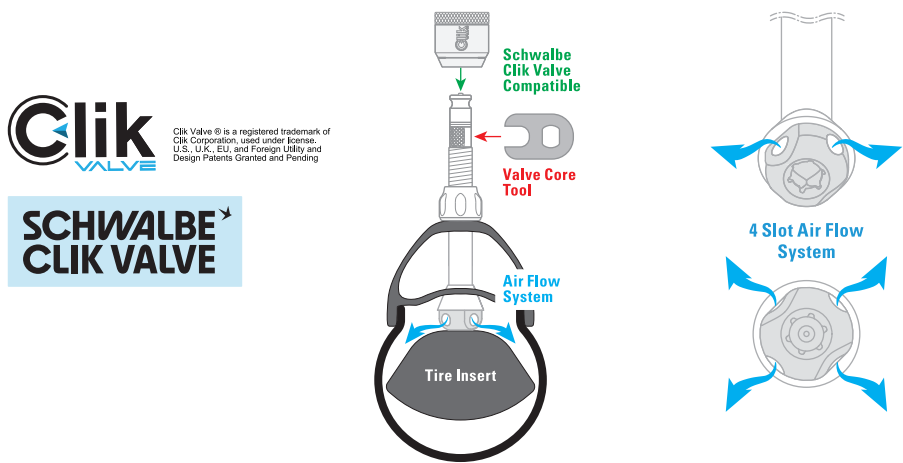

Wheel Rim Height Compatible Range

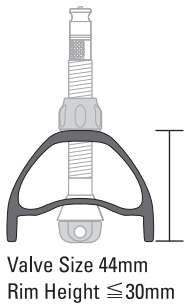

Installation Instructions

- A
- CLIK® TLR VALVE PRO
- A. Remove valve cap, valve nut and O-ring.

B. Insert valve through valve hole in rim, ensuring correct alignment.


C. Install O-ring onto valve stem.

D. Secure valve base using T25 nut and thread valve nut onto valve stem.

E. Hand tighten valve nut until rubber cone seals against inner rim, avoid overtightening.

F. To tighten or loosen valve core, use integrated valve core tool.

G. Install valve cap.

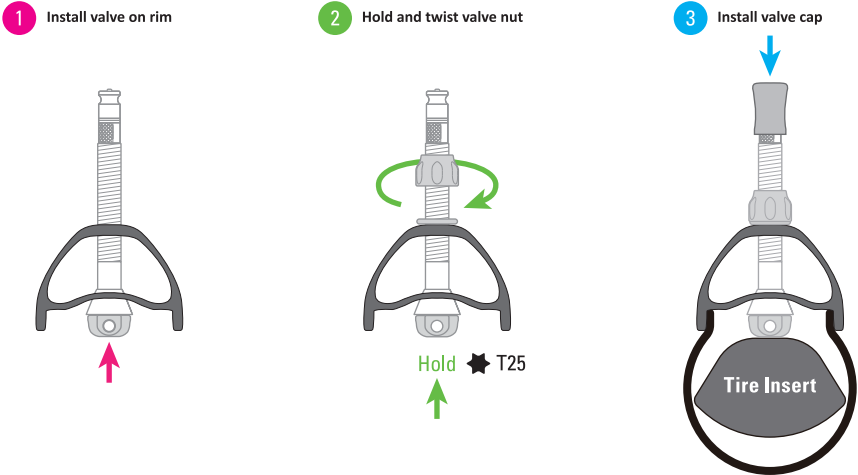

B

Valve Core Tool

